

## ***Table of Contents***

### **Chapter 1    Installation Procedures**

Clear Password: CPW .....	1
Flash ROM Type Selection: EP1, EP2 .....	2
Power Supply Type Selection: PWR .....	2
CPU to SRAM Data Transacting Mode Selection: SRAM .....	2
DIMM Frequency: CLK4 , SDRAM 1 & System Frequency: SDRAM2, SDRAM3 .....	4
CPU External (BUS) Frequency: CLK1, CLK2, CLK3 .....	5
CPU to Bus Frequency Ratio: FREQ1, FREQ2, FREQ3 .....	5
Set CPU Voltage .....	6

### **Chapter 2    BIOS Setup**

CMOS Setup Utility .....	7
Standard CMOS Setup .....	8
Hard Disk Configurations .....	8
Software Turbo Speed .....	8
BIOS Features Setup .....	10
Chipset Features Setup .....	13
Power Management Setup .....	16
PNP/PCI Configuration .....	20
Load BIOS Defaults .....	22
Load Setup Defaults .....	22
Integrated Peripherals .....	22
Supervisor/User Password .....	26
IDE HDD Auto Detection .....	27
Save and Exit Setup .....	28
Exit without Saving .....	28